



AeroAudio
WWW.AEROAUDIO.EU


BLUETOOTH TRANSCIEVER MANUAL



Technical data:

Analogue audio input: Mono +6dBu

Analogue audio outputs: Stereo +6dBu

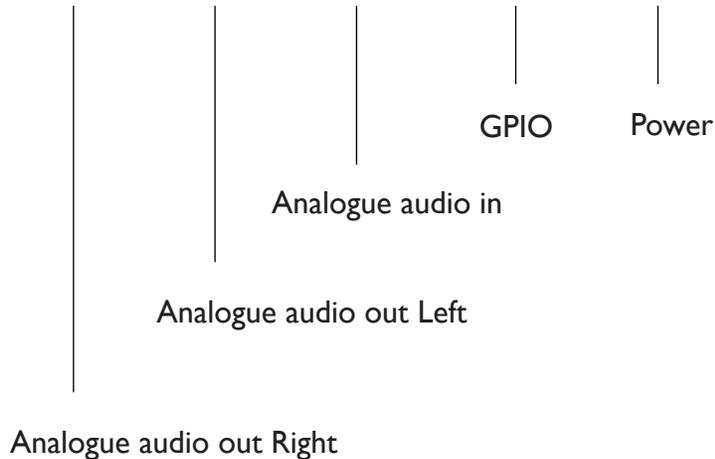

AeroAudio
WWW.AEROAUDIO.EU

STEENWEG 148C - 9810 NAZARETH - BELGIUM - T +32 (0)9 396 76 40 - INFO@AEROAUDIO.EU



AeroAudio

WWW.AEROAUDIO.EU

BLUETOOTH TRANSCIEVER MANUAL

The AeroAudio BTI is a Bluetooth receiver and transmitter for connecting Bluetooth devices to a studio. Not only can music be played from a phone, but also the phone can be used as a telephone fork and thus directly via whatsapp, skype, telephony or other communication apps a conversation in the broadcast. The caller hears the return signal from the studio.

Switching on

When the BTI is switched on, the LED in the connect button will blink fast. This indicates the BTI will start. After starting, the led in the connect button will blink once per 3 seconds. This indicates the BTI is ready to connect, the BTI is now in stand-by mode.

Making a connection

Push the connect button for 1 second to make a new connection. The LED will blink once per second.

The BTI is now visible for other Bluetooth devices under the name AeroAudio BTI. When the bluetooth connection is established, the LED will light up continuously.

As long as the LED is on continuously, it is possible to play audio files or record telephone calls.

In case of an incoming phone call, the BTI will automatically answer the call.

Disconnecting

Press the connect button for 1 second. The BTI will disconnect the existing Bluetooth connection. The LED will blink once per second again, ready to establish a new connection.

Making the module invisible

To make the module invisible to other devices, press the connect button for 1 second after disconnecting it. The LED will now blink once every 3 seconds. The module is no longer visible and pairing is not possible. This avoids confusion about which BT module to connect to when using multiple BT modules.




AeroAudio

WWW.AEROAUDIO.EU


STEENWEG 148C - 9810 NAZARETH - BELGIUM - T +32 (0)9 396 76 40 - INFO@AEROAUDIO.EU

BLUETOOTH TRANSCIEVER MANUAL

XLR 3 pen female

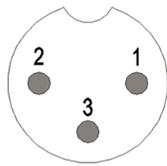


XLR 3 Pen male

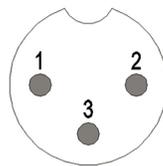

Pin	Function	Type
1	Shield	Shield
2	Signal +	Input
3	Signal -	Input

SUB-D 9 female

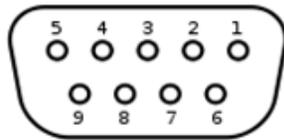

Pin	Functie	Type
1	Switching contact "CONNECT"	Input
2	LED status, +12 volt 20mA	Output
3		n.c.
4		n.c.
5		n.c.
6	Massa contact Pin 1	Massa
7	Massa Pin 2	Massa
8		n.c.
9		n.c.





AeroAudio

WWW.AEROAUDIO.EU

BLUETOOTH TRANSCIEVER MANUAL

Power supply

12 volts DC. Polarity unimportant
Maximum absorbed power: 60mA

Radio module

Bluetooth v4.2 class 2
Frequency: 2400Mhz to 2480MHz
Maximum RF power: 2dBi

RF module certification

- BT SIG/QDID: 83345
- United States/FCC ID:A8TBM64S2
- Canada/ISED
- IC: 12246A-BM64S2
- HVIN: BM64SPKSI MC2
- Europe/CE
- Japan/MIC: 005-101205
- Korea/KCC: MSIP-CRM-mcp-BM64SPKSI MC2
- Taiwan/NCC No: CCANI6LP0280T8
- China/SRRC: CMIIT ID: 2016DJ2356



AeroAudio

WWW.AEROAUDIO.EU

STEENWEG 148C - 9810 NAZARETH - BELGIUM - T +32 (0)9 396 76 40 - INFO@AEROAUDIO.EU



AeroAudio

WWW.AEROAUDIO.EU

BLUETOOTH TRANSCIEVER MANUAL

Safety First!

- Caution: hot and sharp surfaces! This professional device may only be installed by qualified personnel.
- Check the cardboard box for any damage upon receipt of the goods. In case of a damaged box, please contact your distributor before opening it.
contact your distributor before opening the box.
- Read all documentation before using the unit.
- Keep all documentation for future reference.
- Keep the box and the packaging material even if the equipment has arrived in good condition.
- Should you ever need to ship the appliance, use only the original factory packaging.
- Do not spill water or other liquids in or on the device.
- Always use the power supply provided.
- Make sure that the power outlets correspond to the power requirements indicated on the back of the power supply.
- Do not use the device if the power cord is frayed or broken.
- Turn off and disconnect the devices from the mains before making any connections.
- Do not use the device near heaters, heating grills, radiators or other heat producing devices.
- Do not use the unit on a surface or in an environment that may interfere with the normal flow of air around the unit.
If the unit is used in an extremely dusty or smoky environment, the unit should be "dusted" regularly.
- Do not remove the cover. Removing the cover will expose you to potentially dangerous voltages.
- In case of malfunction, this unit should only be serviced by qualified service personnel.
- Always follow the instructions of the supplier and manufacturer - Only use accessories, spare and replacement parts specified by the manufacturer.
- Only use the device for the purpose intended by the manufacturer.



AeroAudio

WWW.AEROAUDIO.EU

STEENWEG 148C - 9810 NAZARETH - BELGIUM - T +32 (0)9 396 76 40 - INFO@AEROAUDIO.EU