

# MOS - LED - IP MANUAL

---

## INDEX

Connections.....	2
Power supply.....	3
Network access.....	4
MOS LED IP settings.....	6
Brightness and Fade speed.....	6
Standby settings.....	7
Methods.....	7
Method 1: SUB-D only (SUB-D 9 GPI contacts or RJ45 GPI contacts).....	8
Method 2: telos Axia x-node / livewire driver.....	10
Method 3: telos Axia QOR/IQ/IQx.....	12
Method 4: DHD logic.....	14
Method 5: TCP commands/ strings.....	15
Dimensions.....	16
Test application.....	17
Safety First!.....	19





**AeroAudio**

WWW.AEROAUDIO.EU


# MOS - LED - IP MANUAL



ETHERNET


USB

RJ45 GPI contacts.

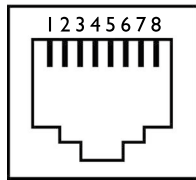

Pin	Function	Signal
1	GPI-1A	+ 5 to + 15 volts
2	GPI-1A GND	Ground
3	GPI-1B	Contact to pin 7 / 9
4	GPI-1B/2B GND	Ground GPI-1B / GPI-2B
5	GPI-2A	+ 5 to + 15 volts
6	GPI-2A GND	Ground GPI-2A
7	GPI-2B	Contact to pin 7 / 9
8	GPI-1B/2B GND	Ground GPI-1B / GPI-2B

SUB-D 9 GPI contacts. In parallel to the RJ45



Pin	Function	Signal
1	GPI-1A	+ 5 to + 15 volts
2	GPI-1B	Contact to pin 7 / 9
3	GPI-2A	+ 5 to + 15 volts
4	GPI-2B	Contact to pin 7 / 9
5	Alarm	Contact to pin 7 / 9
6	GPI-1A GND	Ground
7	GPI-1B/2B GND	Ground GPI-1B / GPI-2B
8	GPI-2A GND	Ground GPI-2A
9	GPI-1B/2B GND	Ground GPI-1B / GPI-2B

SUB-D 9 MALE is included



**AeroAudio**

WWW.AEROAUDIO.EU

STEENWEG 148C - 9810 NAZARETH - BELGIUM - T +32 (0)9 396 76 40 - INFO@AEROAUDIO.EU

# MOS - LED - IP MANUAL



Supply voltage: 12 to 24 volts DC. Polarity is unimportant  
Power consumption of the MOS-LED-IP is 0.7 watt in standby.

Signal indicators: Red - Green - Blue - White

The controller switches ground and uses a fixed + output.  
This is standard for most RGB-W LED strips. Maximum power rating for each colour is 2 Amp with a total maximum power consumption of 4 Amp for all 4 colours.

LED connections:

Pin	Functie
1	+12 / +24V
2	Red
3	Green
4	Blue
5	White

## The power supply.

The maximum power of the power supply depends on the amount of leds that are connected

The power supply can be 12 volt or 24 volt. If you want to calculate what power you need we have the following example:

You can say that 1 meter RGBW led strip consumes 12 watt. The efficiency is about 60 percent. So 5 meters is 60 watt excluding the device itself. The device itself consumes 5 watt. In totally it is about 65 watt.


We advise You to use a power supply and ledstrips from 24 volt if the power consumption is more than 40 watt. That is to decrease the current in te system. Actually, 24 volts can always be used but 12 volt only in low current systems so below 40 watt.

# MOS - LED - IP MANUAL

## Network access

The MOS Led IP does not support the dhcp protocol for ip settings. In stead You can use a freeware tool called Packetsender. You can download this at [www.packetsender.com/download](http://www.packetsender.com/download)

With this tool You are able to set the MOS led directly to a correct IP address for Your own network. You can sent a so called broadcast to the MOS LED on a specific port to arrange this.

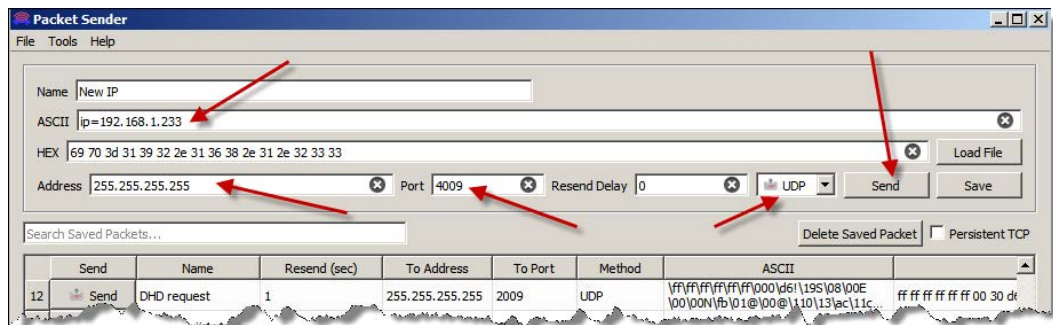

To do this type at the ASCII line the text: `ip=192.168.1.20` All together and lowercase; so no spaces. You can use any IP address as long as it starts with `ip=` and don't forget the dots!


At the address you type `255.255.255.255` to broadcast it on the network. A broadcast is sent to every device at your network. Next You have to select the port number. This has to be `4009` and at last select the protocol. This has to be `UDP`. Then finally press sent.

As soon as this broadcast is accepted by the MOS led the green led will lit for 2 seconds.

Now You can load the webpage with a browser by typing this IP address in the search line of the browser.

Port `4009` will be closed as soon as the webpage is loaded at your browser. The reason for that is that ports that are not used anymore, has to be closed. Just to be sure that there is no unnecessary traffic.

To activate ( and open ) port `4009` again You have switch of the power for a couple of seconds.

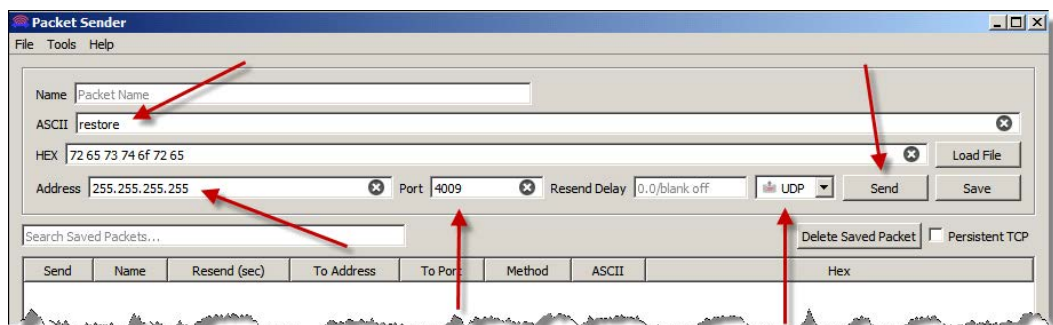

There is also a command to restore the default IP address `192.168.0.101`

This is the command `restore` All in lower case. If you sent this command the default IP address settings are restored



# MOS - LED - IP MANUAL

---

The MOS LED IP settings can be adjusted using a standard webbrowser.

**The factory default settings:**  
**IP 192.168.0.101**  
**Subnetmask: 255.255.255.0**

It may take up to 30 seconds for the device to be active on the network after connecting the device to your computer or network.

Enter the IP address in your browser and the MOS LED IP will display the following settings page:

## Aero Audio

### MOS-LED-IP

Device mode: <input type="text" value="GPI commands"/>	
Remote device settings  Select device: <input type="text" value="SUB-D selected"/> <input type="button" value="v"/> Remote IP: <input type="text" value="192.168.0.100"/>	Brightness: <input type="range" value="90"/>  Fade speed: <input type="range" value="10"/>
GPI 1 settings  Color: <input type="color" value="#ff0000"/>  Blink speed: <input type="range" value="50"/>	GPI 2 settings  Color: <input type="color" value="#00ff00"/>  Blink speed: <input type="range" value="50"/>
Standby settings  Color: <input type="color" value="white"/>  Light settings: <input type="text" value="Continuous selected"/> <input type="button" value="v"/>	
MOS IP settings IP address: <input type="text" value="192.168.0.101"/> Subnet mask: <input type="text" value="255.255.255.0"/> MAC: <input type="text" value="00.50.C2.80.80.62"/>  Firmware: V 1.05	<input type="button" value="Save settings and reboot"/>

Copyright © 2022 - www.AeroAudio.eu



# MOS - LED - IP MANUAL

---

## MOS LED IP settings

Here the IP address with the corresponding subnet mask can be set. The MAC address is unique for each device and can not be changed. The firmware shows the currently running firmware version of the device.

MOS IP settings	
IP address:	<input type="text" value="192.168.0.101"/>
Subnet mask:	<input type="text" value="255.255.255.0"/>
MAC:	<input type="text" value="00.50.C2.80.80.62"/>
Firmware:	V 1.05

To activate and save the settings press “Save settings and reboot.”

## Brightness and Fade speed

Brightness:	<input type="range" value="80"/>
Fade speed:	<input type="range" value="20"/>

**Brightness:** Here you can adjust the intensity of the led-strip.

**Fade speed:** Here you can adjust the fade speed of the led-strip.


To activate and save the settings press “Save settings and reboot.”



# MOS - LED - IP MANUAL

---

## Standby settings

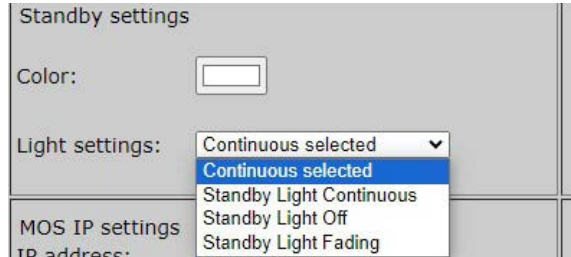

**Standby light Continuous:** When no triggers are active (GPI 1 - GPI 2) this color will be active.

**Standby light Off:** When no triggers are active (GPI 1 - GPI 2) there will be NO color.

**Standby light Fading:** When no triggers are active (GPI 1 - GPI 2) this color will be fading up and down.


To activate and save the settings press "Save settings and reboot."

Save settings and reboot

## Methods

There are 5 methods to work with MOS LED IP:

- METHOD 1: SUB-D ONLY (SUB-D 9 GPI contacts or RJ45 GPI contacts)
- METHOD 2: TELOS AXIA X-NODE / LIVEWIRE DRIVER
- METHOD 3: TELOS AXIA QOR/IQ/IQX
- METHOD 4: DHD GLOBAL LOGIC
- METHOD 5: TCP COMMANDS

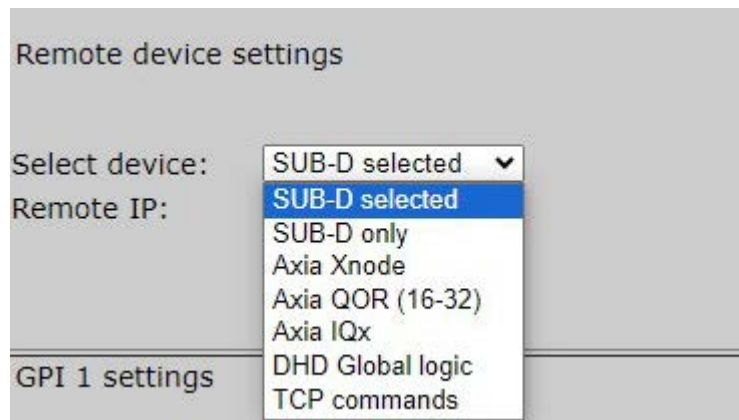




**AeroAudio**


WWW.AEROAUDIO.EU

# MOS - LED - IP MANUAL

## METHOD 1: SUB-D ONLY (SUB-D 9 GPI CONTACTS OR RJ45 GPI CONTACTS)

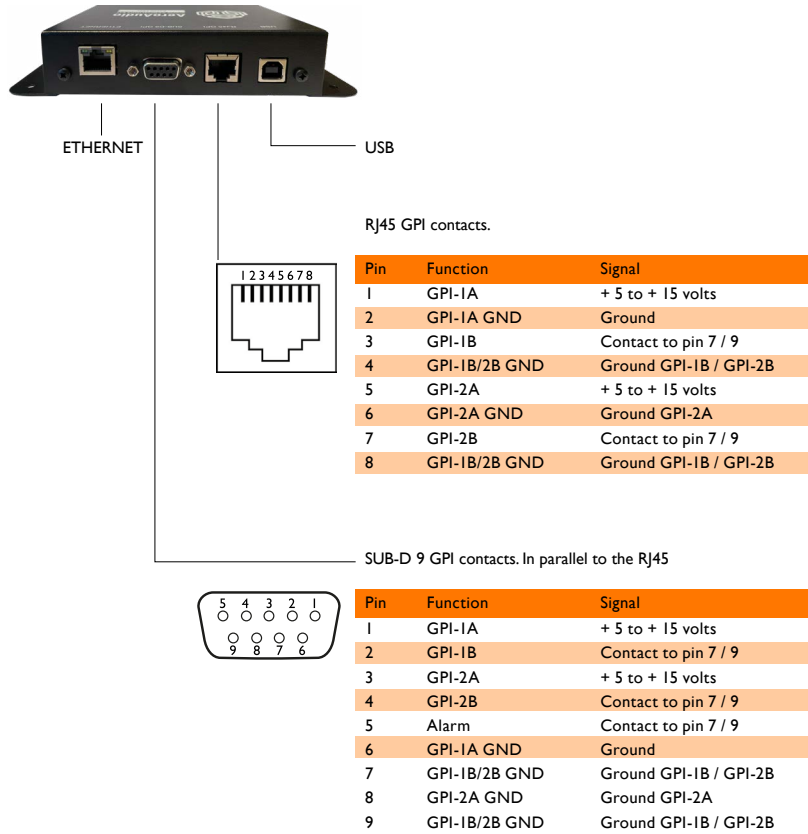

The voltage control of GPI1 and GPI2 are isolated from each other and from the MOS-LED. Voltage control is possible between +5 and +15 volts DC.

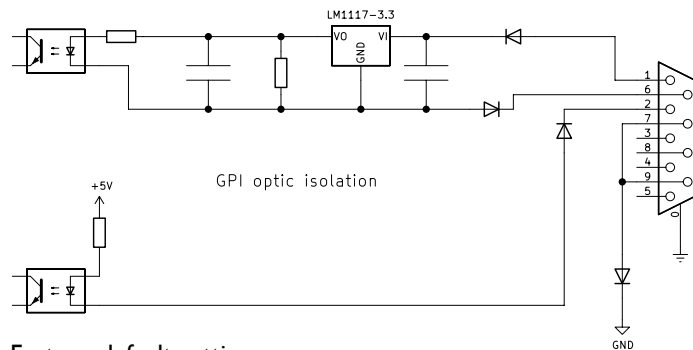

Factory default settings:

- GPI1 = Red (Full on)
- GPI2 = Green (fully on, flashing)
- No GPI active = White.

If GPI1 is on and GPI2 joins it (or vice versa) then the LED control will alternate between Red and Green.



**AeroAudio**

WWW.AEROAUDIO.EU


STEENWEG 148C - 9810 NAZARETH - BELGIUM - T +32 (0)9 396 76 40 - INFO@AEROAUDIO.EU



# MOS - LED - IP MANUAL

---

**Remote device settings:** select “SUB-D”

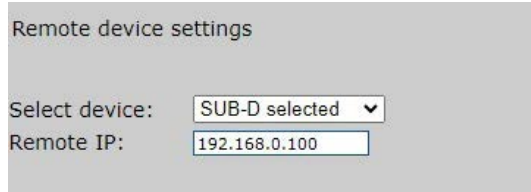

Remote device settings


Select device:  ▾

Remote IP:

**Remote IP:** not used in this method

To activate and save the settings press “Save settings and reboot.”

## GPI 1 (same for GPI 2)

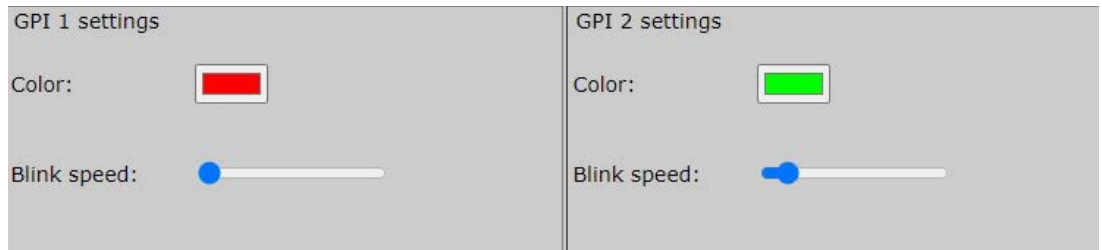

GPI 1 settings

Color:


Blink speed:

GPI 2 settings

Color:

Blink speed:

**Color:** color selection

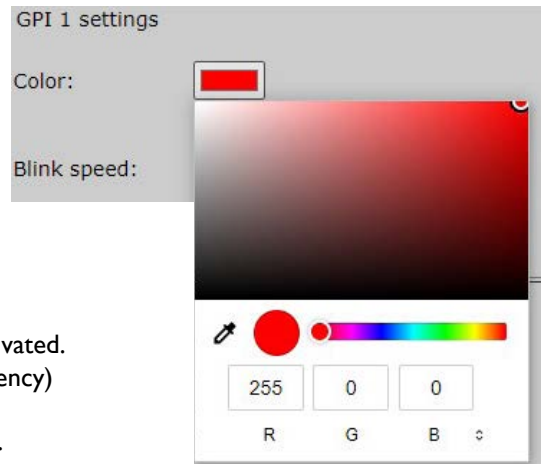

GPI 1 settings

Color:

Blink speed:

255 0 0  
R G B ↕

**Blink speed:** If set to left, the color will not be blinking when activated. If turned more to the right side, the color will be blinking when activated. To adjust the blinking speed (frequency) move the slider as desired (the more to the right, the slower).

To activate and save the settings press “Save settings and reboot.”




# MOS - LED - IP MANUAL

---


## METHOD 2: TELOS AXIA X-NODE / LIVEWIRE DRIVER

**Remote device settings:** select “Axia X-node”

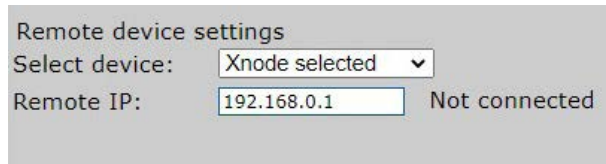


Remote device settings  
 Select device: Xnode selected  
 Remote IP: 192.168.0.1 Not connected

**Remote IP:** enter the IP address of the X-node/livewire  
 In this example 192.168.0.100 - Make sure that devices are in the same IP-range.

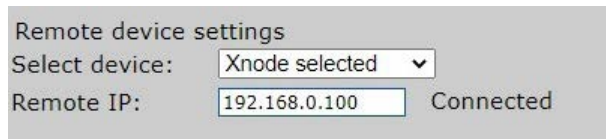

Remote device settings  
 Select device: Xnode selected  
 Remote IP: 192.168.0.100 Connected


To activate and save the settings press “Save settings and reboot.”



Save settings and reboot

## GPI 1 (same for GPI 2)


**GPIO:** Select your GPIO contact and designated PIN  
 In this example “GPI1” and “PIN 1”

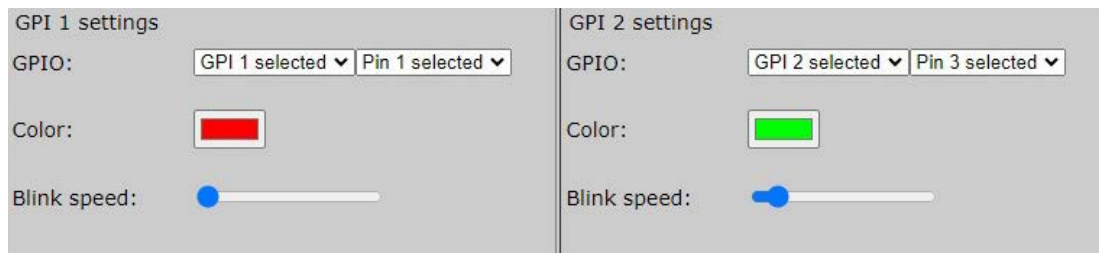

GPI 1 settings  
 GPIO: GPI 1 selected Pin 1 selected  
 Color: [Red]  
 Blink speed: [Slow]

GPI 2 settings  
 GPIO: GPI 2 selected Pin 3 selected  
 Color: [Green]  
 Blink speed: [Fast]

**Color:** color selection

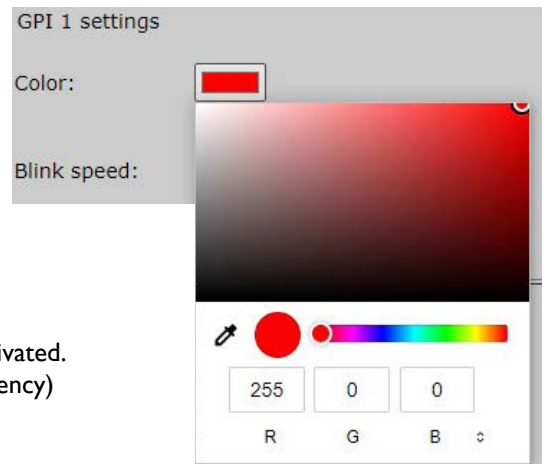

GPI 1 settings  
 Color: [Red]  
 Blink speed: [Slider]

Color selection dialog:  
 [Red swatch]  
 RGB: 255 0 0  
 R G B

**Blink speed:** If set to left, the color will not be blinking when activated.  
 If turned more to the right side, the color will be blinking when activated.  
 To adjust the blinking speed (frequency)





**AeroAudio**

WWW.AEROAUDIO.EU

# MOS - LED - IP MANUAL

---

To activate and save the settings press “Save settings and reboot.”

Save settings and reboot

After save settings and reboot, if the device is found it will show “connected”

Remote device settings  
Select device: Xnode selected ▼  
Remote IP: 192.168.0.1 Not connected

If not it will show “not connected”  
Please check if your device is correctly connected and the IP address is set correct.



**AeroAudio**

WWW.AEROAUDIO.EU


STEENWEG 148C - 9810 NAZARETH - BELGIUM - T +32 (0)9 396 76 40 - INFO@AEROAUDIO.EU

# MOS - LED - IP MANUAL

---


## METHOD 3: TELOS AXIA QOR/IQ/IQx

**Remote device settings:** select “Axia QOR/IQx”




Remote device settings  
 Select device: QOR/IQx selected ▾  
 Remote IP: 192.168.0.1

**Remote IP:** enter the IP address of the QOR/IQx  
 In this example 192.168.0.1 - Make sure that devices are in the same IP-range.



Remote device settings  
 Select device: QOR/IQx selected ▾  
 Remote IP: 192.168.0.1 connected


To activate and save the settings press “Save settings and reboot.”



Save settings and reboot

## GPI 1 (same for GPI 2)

**Channel Name:** Enter the source name that you like use (the QOR/IQx source profile name).  
 In this example “MIC1” for GPI 1.

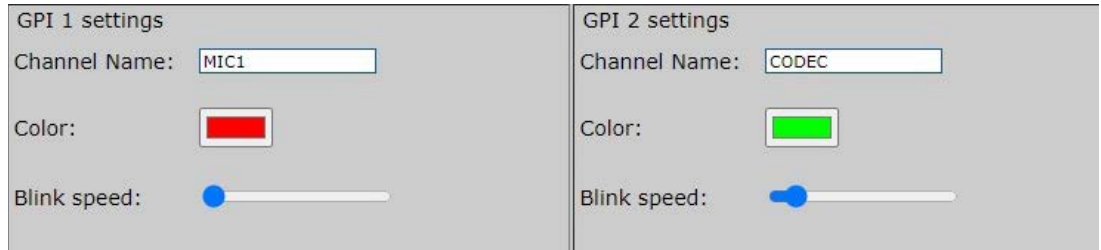

<b>GPI 1 settings</b> Channel Name: MIC1 Color: <span style="display:inline-block; width:15px; height:15px; background-color:red; border:1px solid black;"></span> Blink speed: <input type="range" value="0"/>	<b>GPI 2 settings</b> Channel Name: CODEC Color: <span style="display:inline-block; width:15px; height:15px; background-color:limegreen; border:1px solid black;"></span> Blink speed: <input type="range" value="50"/>
--	--

**Color:** color selection



GPI 1 settings  
 Color:   
 Blink speed:

Color selection dialog:  
 - Color wheel with red selected  
 - RGB values: R: 255, G: 0, B: 0

**Blink speed:** If set to left, the color will not be blinking when activated.  
 If turned more to the right side, the color will be blinking when activated.  
 To adjust the blinking speed (frequency)



# MOS - LED - IP MANUAL

---

To activate and save the settings press “Save settings and reboot.”

Save settings and reboot

Make sure for the first use to reload the show profile of your studio console.

Remote device settings  
Select device:  ▼  
Remote IP:  Not connected

If not it will show “not connected”  
Please check if your device is correctly connected and the IP address is set correct.

If for any reason the MOS LED IP doesn't react on the commands of the QOR/IQx (this can be caused by power reboot of the QOR/IQx or too fast loading of the show profiles) then please try to reload the show profile on the QOR/IQx.




# MOS - LED - IP MANUAL

---

## METHOD 4: DHD LOGIC

**Remote device settings:** select “DHD logic”

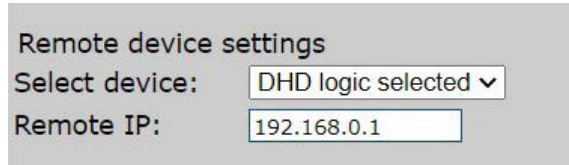

Remote device settings  
 Select device:  ▼  
 Remote IP:

**Remote IP:** enter IP of the DHD device  
 In this example 192.168.0.1 - Make sure that devices are in the same IP-range.

To activate and save the settings press “Save settings and reboot.”

## GPI 1 (same for GPI 2)


**DHD Project ID:** enter your DHD Project ID, in this example “TEST”

**Global logic:** enter your Global logic, in this example “1” for GPI 1



GPI 1 settings	GPI 2 settings
DHD Project ID: <input type="text" value="TEST"/>	DHD Project ID: <input type="text" value="TEST"/>
Global logic: <input type="text" value="1"/>	Global logic: <input type="text" value="2"/>
Color: <input type="color" value="red"/>	Color: <input type="color" value="green"/>
Blink speed: <input type="range" value="50"/>	Blink speed: <input type="range" value="50"/>

**Color:** color selection

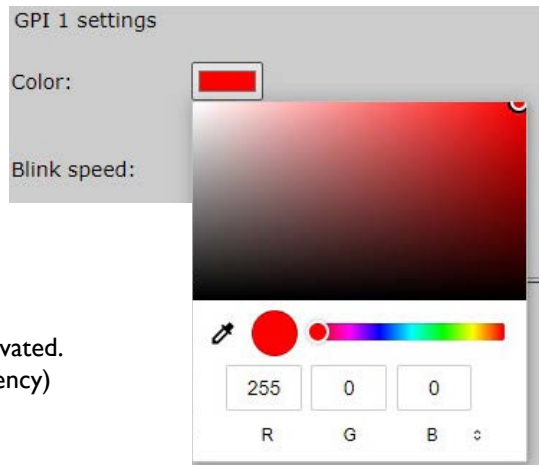

GPI 1 settings  
 Color:   
 Blink speed:

Color selection dialog:  
  
 255 0 0  
 R G B

**Blink speed:** If set to left, the color will not be blinking when activated.  
 If turned more to the right side, the color will be blinking when activated.  
 To adjust the blinking speed (frequency)

To activate and save the settings press “Save settings and reboot.”




# MOS - LED - IP MANUAL

---

## METHOD 5: TCP COMMANDS/ STRINGS


**Remote device settings:** select “TCP commands”

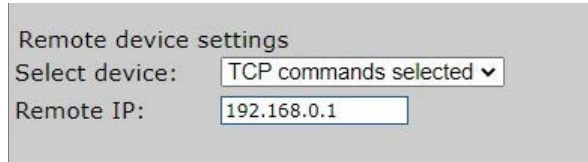

Remote device settings  
 Select device: TCP commands selected ▾  
 Remote IP: 192.168.0.1

**Remote IP:** not used in this method

To activate and save the settings press “Save settings and reboot.”






## GPI 1 (same for GPI 2)



You can activate this command by sending the specific string to the IP address of the MOS LED IP and port 93. In this example 192.168.0.101 port 93

**TCP ON:** string to activate GPI in this example “ON1” for GPI 1


**TCP OFF:** string to deactivate GPI in this example “OFF1” for GPI 1

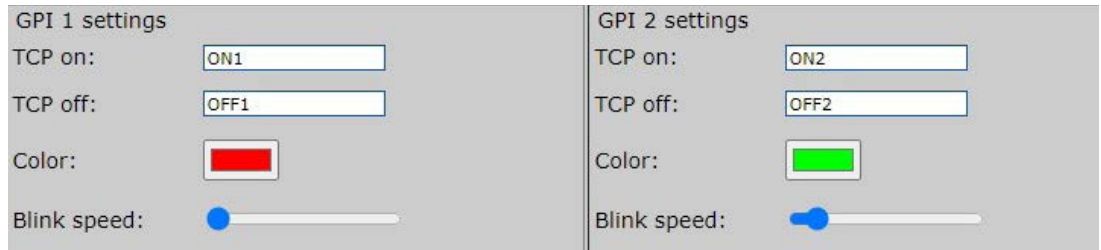






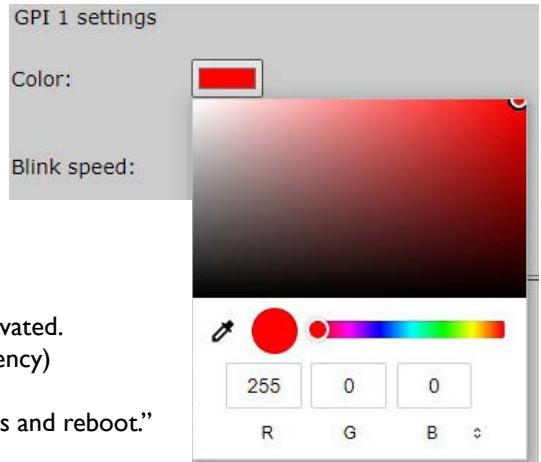


GPI 1 settings  
 TCP on: ON1  
 TCP off: OFF1  
 Color:   
 Blink speed: 

GPI 2 settings  
 TCP on: ON2  
 TCP off: OFF2  
 Color:   
 Blink speed: 

**Color:** color selection




GPI 1 settings  
 Color:   
 Blink speed: 

255 0 0  
 R G B ↻

**Blink speed:** If set to left, the color will not be blinking when activated.  
 If turned more to the right side, the color will be blinking when activated.  
 To adjust the blinking speed (frequency)

To activate and save the settings press “Save settings and reboot.”






**AeroAudio**

WWW.AEROAUDIO.EU


# MOS - LED - IP MANUAL

---

## Dimensions

Dimensions: 170\*109\*31 mm

Weight: 0.25 Kg

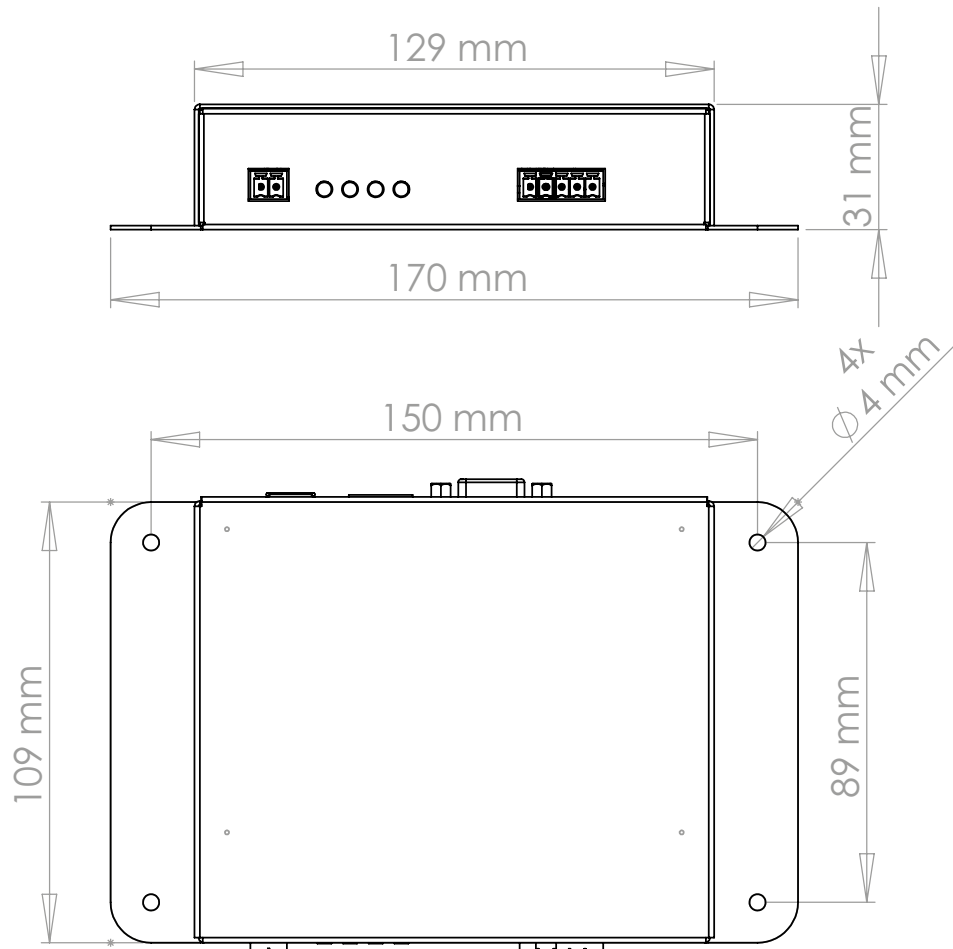

**AeroAudio**

WWW.AEROAUDIO.EU

STEENWEG 148C - 9810 NAZARETH - BELGIUM - T +32 (0)9 396 76 40 - INFO@AEROAUDIO.EU





AeroAudio

WWW.AEROAUDIO.EU

# MOS - LED - IP MANUAL

Test application [download](#)

There are 2 options to run The Test\_Application\_MOS\_LED\_IP.py file:

## 1. In Command prompt

To do this, you need to go to the location where the file is located by typing: cd "location of file"

Next you type this: python Test\_Application\_MOS\_LED\_IP.py  
When you press enter, the program will start immediately.

## 2. In any software that can run python (for example Thonny)

When the file is opened you can press F5 and the program will start immediately.

In the first application you'll need to type in the IP address.

You can reach the local website of the MOS LED IP by typing the IP address of the device in a web browser. If you can't reach the local website, then you probably need to change the IP address of the ethernet port of your computer to the same range as the IP of the MOS Quatro IP.

Next you can chose which protocol you want to use to send the commands.

You have 2 options: TCP or DHD.

## 1. TCP

If you choose "TCP", than you need to select on the local website of the device "TCP commands". Now press "Save settings and reboot". This will allow you to send TCP commands to the device.



After this you need to set the "TCP ON" and "TCP OFF" for GPI 1 setting to "On1" and "Off1". You need to do the same for GPI 2 settings, but in stead of "On1" and "Off1" you need to type in "On2" and "Off2". After this you need to press the "Save settings and reboot" button on the local website.

When you've typed in the correct IP address in the application, you can press "Connect" and a new window will open (this may take 2 seconds). If there is any error, than this will be displayed in an error above the exit button.

In this window you can change the state of the leds by sending TCP commands if you've pressed a button. You can also press "Automatic", then the leds will switch between the 2 colors you've chosen. To stop automatic, simply press "Stop automatic".

If there are any errors this will be displayed next to the home button at the bottom of the application.

When everything seems to work you can close the application by pressing the cross at the top right of the application or by pressing the home button at the bottom of the application.

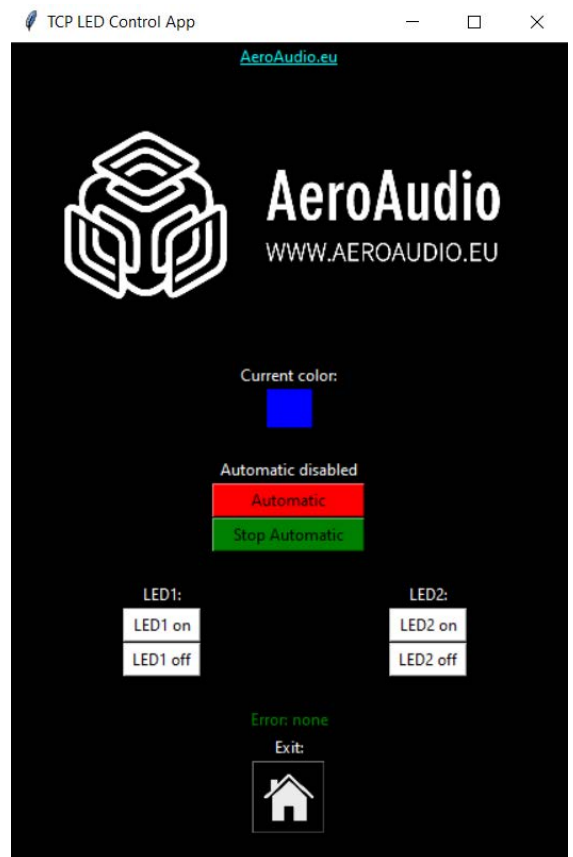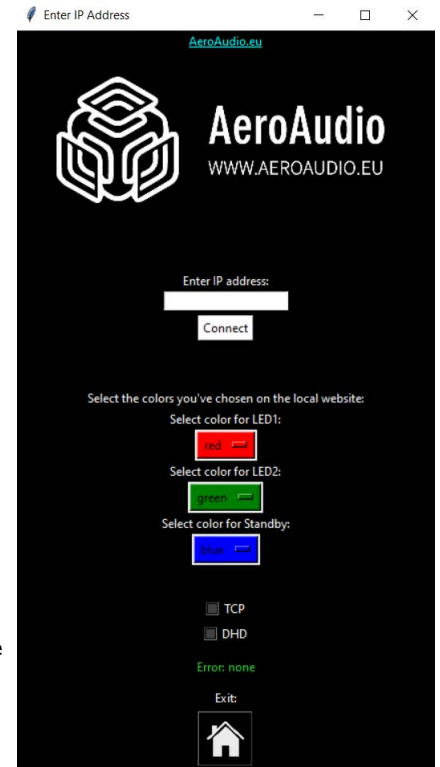

AeroAudio

WWW.AEROAUDIO.EU

STEENWEG 148C - 9810 NAZARETH - BELGIUM - T +32 (0)9 396 76 40 - INFO@AEROAUDIO.EU



**AeroAudio**

WWW.AEROAUDIO.EU

# MOS - LED - IP MANUAL

---

## 2. DHD

If you choose “DHD”, then you need to select on the local website of the device “DHD global logics”. Now press “Save settings and reboot”.

This will allow you to send DHD commands in UDP packets to the device. After this you need to set “DHD Project ID” of GPI 1 settings to “AERO”.

Now you need to set “Global logic” of GPI 1 settings to “1” and for GPI 2 settings to “2”. After this you need to press “Save settings and reboot”.

Now when you’ve typed in the correct IP address in the application, you can press “Connect” and a new window will open.

If there is any error, than this will be displayed in an error above the exit button.

In the window you can change the state of the leds by sending UDP packets if you’ve pressed a button.

You can also press “Automatic”, then the leds will switch between the 2 colors you’ve chosen.

To stop automatic, simply press “Stop automatic”.

If there are any errors this will be displayed next to the home button at the bottom of the application. When everything seems to work you can close the application by pressing the cross at the top right of the application or by pressing the home button at the bottom of the application.



**AeroAudio**

WWW.AEROAUDIO.EU

STEENWEG 148C - 9810 NAZARETH - BELGIUM - T +32 (0)9 396 76 40 - INFO@AEROAUDIO.EU



**AeroAudio**

WWW.AEROAUDIO.EU

# MOS - LED - IP MANUAL

---

## Safety First!

- Caution: hot and sharp surfaces ! This professional device should only be installed by qualified personnel.
- Check the cardboard box for any damage upon receipt of the goods. In case of a damaged box, please contact your distributor contact your distributor before opening the box.
- Read all documentation before using the unit.
- Keep all documentation for future use.
- Keep the box and packing materials even if the equipment has arrived in good condition.
- Should you ever need to ship the equipment, use only the original factory packaging.
- Do not spill water or other liquids in or on the unit.
- Always use the power supply provided.
- Make sure the outlets match the power requirements listed on the back of the power supply.
- Do not use the unit if the power cord is frayed or broken.
- Turn off and disconnect the devices from the power supply before making any connections.
- Do not use the unit near heaters, heating vents, radiators, or other devices that produce heat.
- Do not use the unit on a surface or in an environment that may interfere with the normal flow of air around the unit.  
If the unit is used in an extremely dusty or smoky environment, the unit should be "dusted" periodically.
- Do not remove the cover. Removing the cover will expose you to potentially dangerous voltages.
- In case of malfunction, this unit should only be serviced by qualified service personnel.
- Always follow the instructions of the supplier and manufacturer - Use only manufacturer specified accessories, spare and replacement parts.
- Use the device only for the application the manufacturer intended.



**AeroAudio**

WWW.AEROAUDIO.EU

STEENWEG 148C - 9810 NAZARETH - BELGIUM - T +32 (0)9 396 76 40 - INFO@AEROAUDIO.EU